

MAINTENANCE

STAINLESS STEEL

Stainless steel should be kept clean to ensure its continued integrity.

CLEANING

Soiled stainless steel surfaces can be cleaned with sodium soap and water (but not detergents or solvents) using non-abrasive scrubbing (soil includes dirt, food and any other waste).

STEELPLEX™ FINISH

Steelplex™ is a system developed by, and unique to Electro Seal and incorporates their in-house galvanising and double powder coating. The galvanising meets all requirements of Australian/New Zealand Standards (AS/NZS 2312: 1994).

CLEANING

1. Remove loose deposits with fresh water and sponge/soft brush
2. Clean surface with sponge/soft brush using a mild detergent
3. Rinse thoroughly with fresh water to completely remove detergent/dirt residues

GALVANISED FINISH

Surface should be kept clean to ensure the continued integrity of the coating. Any damage to the coating should be repaired as soon as possible.

CLEANING

Soiled steel surfaces can be cleaned with sodium soap and water (but not detergents or solvents) using non-abrasive scrubbing (soil includes dirt, food and any other waste).

CUTEK EXTREME

Cutek Extreme is an unique wood protection oil which keeps wood and engineered timber looking great for many years. Cutek Extreme is formulated to minimise warping, cupping and splitting. It must be re-applied at regular intervals (every 3-6 months), as the coating will deteriorate more rapidly on horizontal surfaces, dependent on the amount of exposure to sunlight, abrasion and standing water.

CLEANING

To remove excess dirt or staining, clean all surfaces with a solution of oxalic acid (100 grams) mixed with warm water (1 litre). Alternatively use a proprietary brand wood cleaner. Allow to dry for 3 days prior to re-coating.

WEATHERED STEEL

Rustic steel finish created in-house at UAP. Mild steel is sandblasted, and then sprayed with river water for approximately 14 days to create a layer of weathered appearance. The steel is then coated with an Active Rust Inhibitor to both seal the weathered layer and prevent further corrosion. Coating should be kept clean to ensure the continued integrity of the coating.

CLEANING

Soiled weathered steel surfaces can be cleaned with sodium soap and water (but not detergents or solvents) using non-abrasive scrubbing (soil includes dirt, food and any other waste).

PRODUCT SAFETY INFORMATION

ROUTINE VISUAL INSPECTION

Routine visual inspections are required to identify obvious hazards that may result from vandalism, use or the natural environment.

Check all products and surroundings subject to heavy use or vandalism. These inspections should be carried out daily. Check all products for broken, loose or missing components. Extra attention should be given to elements with moving parts.

Check that all footings and fasteners are intact and secure.

OPERATIONAL INSPECTION

Operational inspections to check the stability of the equipment, especially for any wear and tear, should be carried out every 3-6 months.

Check all metal components for sharp edges and points. In some cases sharp edges and points can be lightly filed smooth. Inspect welds for fractures or possible weld separation. Check the stability of all products concerned. Should any product/structure be loose, tighten, repair and/or replace all footings and/or fasteners accordingly.

INSTALLATION

All UAP Street Furniture items are shipped assembled, unless otherwise specified.

Installation is to be done by the client or his/her agent as per installation instructions available from UAP.

WARRANTY

The warranty with respect to failure due to material or production defects on timber and metal structural parts such as poles, cross beams, fixing brackets and cast elements are limited to 7 years commencing on the date of delivery. The warranty with respect to failure due to material or production defects on springs, washers, painted metal parts and plastic components are limited to 1 year commencing on the date of delivery.

The warranty is limited to parts covered by the warranty. Such defective parts will be replaced by UAP and will be delivered to the customer's address free of charge. The warranty is not effective if products have not been installed properly according to the instructions provided by UAP, or maintained correctly according to the UAP Maintenance Manual.

The warranty does not cover normal wear and tear, surface corrosion on metal parts, discoloured surfaces and other cosmetic issues or failures due to misuse or vandalism.